 


SOLENOID INSTALLATION INSTRUCTIONS FOR MAZDA N4A-EL

1. Remove old solenoids and wiring harness from valve body.
2. Refer to the solenoid application chart and wire color guide listed below for correct placement of the new solenoids.
3. Insert new solenoid assembly into valve body.
4. Slide corresponding mounting bracket over locating post on solenoid.

**NOTE: Be aware that the solenoid may rotate during normal operation.
Position lead wires away from any moving parts.**

5. While holding mounting bracket in position, attach black ground wire and mounting bolt to valve body. Make sure solenoid and bracket are positioned correctly before tightening mounting bolts.
6. Plug in mating connectors with original wiring harness.

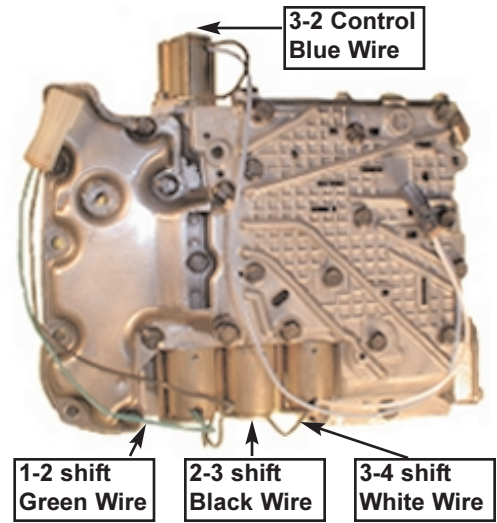

 
Form #4141, Rev. B, 06-17-02

SOLENOID INSTALLATION INSTRUCTIONS FOR MAZDA N4A-EL

1. Remove old solenoids and wiring harness from valve body.
2. Refer to the solenoid application chart and wire color guide listed below for correct placement of the new solenoids.
3. Insert new solenoid assembly into valve body.
4. Slide corresponding mounting bracket over locating post on solenoid.

**NOTE: Be aware that the solenoid may rotate during normal operation.
Position lead wires away from any moving parts.**

5. While holding mounting bracket in position, attach black ground wire and mounting bolt to valve body. Make sure solenoid and bracket are positioned correctly before tightening mounting bolts.
6. Plug in mating connectors with original wiring harness.

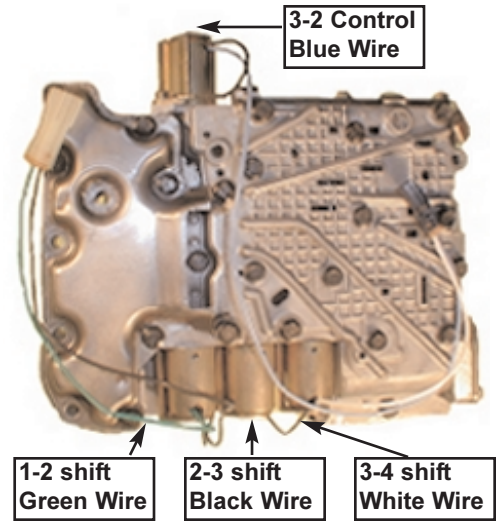


Form #4141, Rev. B, 06-17-02

SOLENOID INSTALLATION INSTRUCTIONS FOR MAZDA N4A-EL

1. Remove old solenoids and wiring harness from valve body.
2. Refer to the solenoid application chart and wire color guide listed below for correct placement of the new solenoids.
3. Insert new solenoid assembly into valve body.
4. Slide corresponding mounting bracket over locating post on solenoid.

**NOTE: Be aware that the solenoid may rotate during normal operation.
Position lead wires away from any moving parts.**

 5. While holding mounting bracket in position, attach black ground wire and mounting bolt to valve body. Make sure solenoid and bracket are positioned correctly before tightening mounting bolts.
6. Plug in mating connectors with original wiring harness.

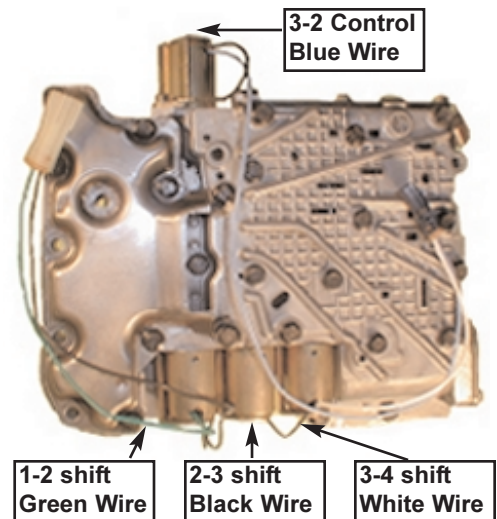

Form #4141, Rev. B, 06-17-02