



Installation Instructions for Mazda F4A-EL and Ford F4EAT Solenoid

1. Remove old solenoids and wiring harness from valve body and transmission case.
2. Refer to the illustration for solenoid location and OEM wire color.
3. Insert new solenoids in valve body, refer to printing on bracket for proper location.
4. Attach ground wire to mounting bolt. Verify that the solenoid and bracket are correctly positioned before tightening the mounting bolt.
5. Follow the OEM wire routing path and make sure wires do not get pinched.
6. Plug the mating connectors into the original wiring harness.

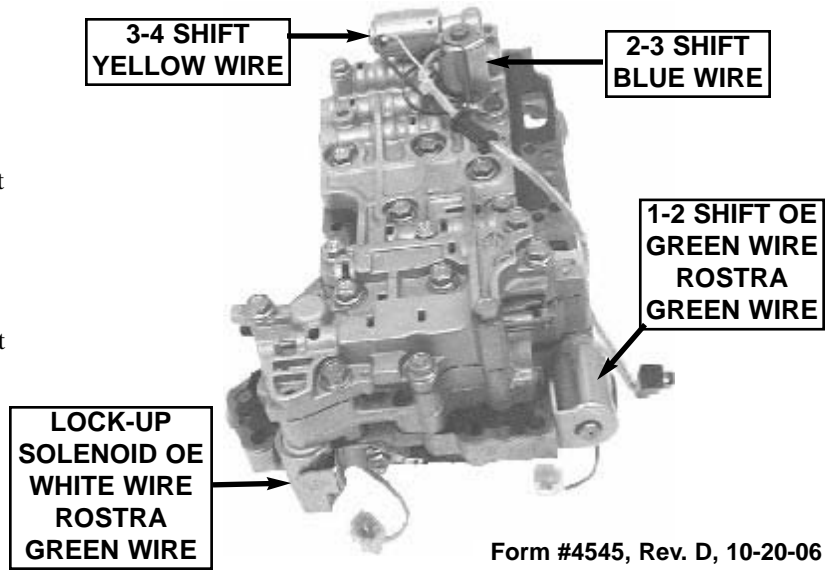

Installation Instructions for Mazda F4A-EL and Ford F4EAT Solenoid

1. Remove old solenoids and wiring harness from valve body and transmission case.
2. Refer to the illustration for solenoid location and OEM wire color.
3. Insert new solenoids in valve body, refer to printing on bracket for proper location.
4. Attach ground wire to mounting bolt. Verify that the solenoid and bracket are correctly positioned before tightening the mounting bolt.
5. Follow the OEM wire routing path and make sure wires do not get pinched.
6. Plug the mating connectors into the original wiring harness.

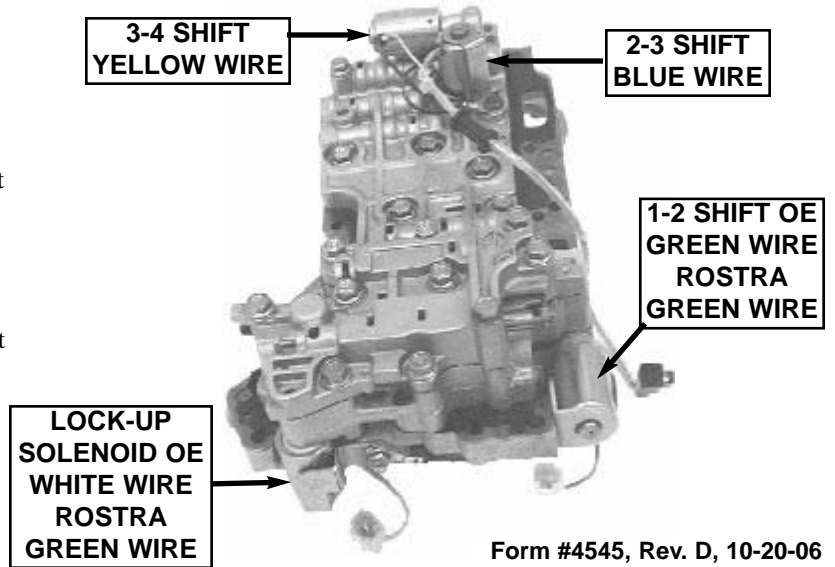

Installation Instructions for Mazda F4A-EL and Ford F4EAT Solenoid

1. Remove old solenoids and wiring harness from valve body and transmission case.
2. Refer to the illustration for solenoid location and OEM wire color.
3. Insert new solenoids in valve body, refer to printing on bracket for proper location.
4. Attach ground wire to mounting bolt. Verify that the solenoid and bracket are correctly positioned before tightening the mounting bolt.
5. Follow the OEM wire routing path and make sure wires do not get pinched.
6. Plug the mating connectors into the original wiring harness.

