


Installation Instructions for Rostra's Quick-Link

1. Strip the transmission wire harness to 3/8" (9.5 mm) length. Use the grip portion of the connector as a guide.

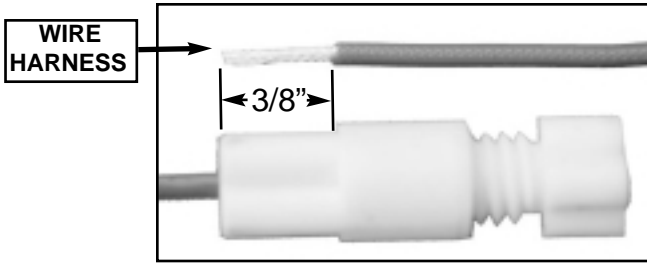

NOTE: If the strip length is too short, the connector will not function properly. The stripped portion of the wire must extend beyond the locking mechanism.


2. Slip the screw cap over the portion of the wire harness just stripped.



See Reverse Side For Installation Instructions For GM 4L60E Lock-up Solenoid


Form #4742, Rev. RTP, 08-09-02

3. Insert the stripped wire into the center of the metal sleeve on the connector as shown.

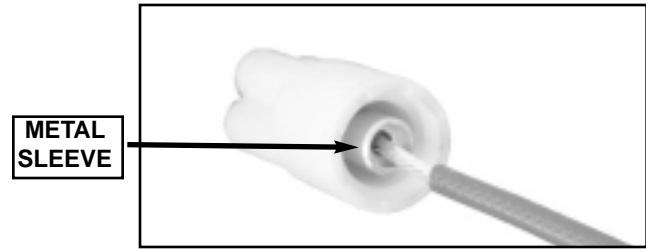


NOTE: Proper strip length is critical.

4. Screw the cap into the connector until they are flush. Installation is complete.

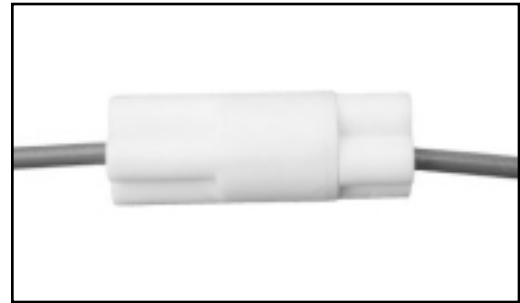


Installation Instructions for Rostra's Quick-Link

1. Strip the transmission wire harness to 3/8" (9.5 mm) length. Use the grip portion of the connector as a guide.

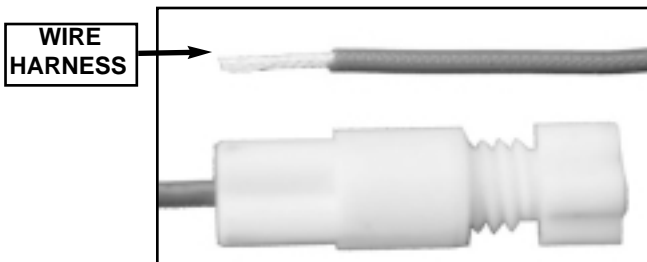

NOTE: If the strip length is too short, the connector will not function properly. The stripped portion of the wire must extend beyond the locking mechanism.


2. Slip the screw cap over the portion of the wire harness just stripped.

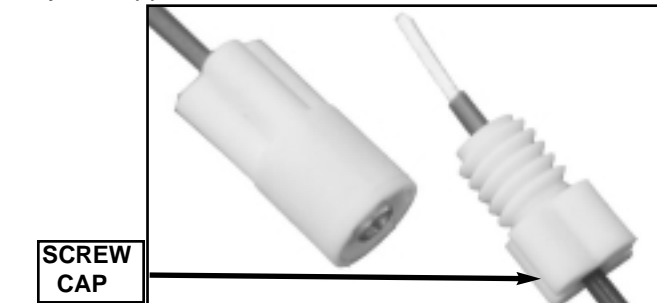

See Reverse Side For Installation Instructions For GM 4L60E Lock-up Solenoid


Form #4742, Rev. RTP, 08-09-02

3. Insert the stripped wire into the center of the metal sleeve on the connector as shown.

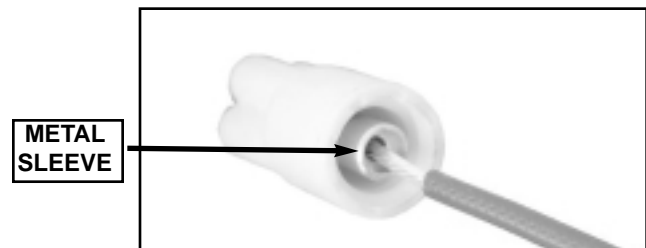

NOTE: Proper strip length is critical.

4. Screw the cap into the connector until they are flush. Installation is complete.

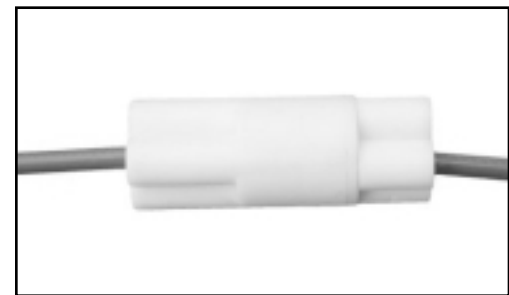

Installation Instructions for GM 4L60E Lock-up Solenoid

1. Cut wires approximately 1 inch (25mm) from the old solenoid. Remove old solenoid.
2. Assemble wires, as illustrated on the reverse side.
3. Install solenoid and tighten mounting bolts.



Installation Instructions for GM 4L60E Lock-up Solenoid

1. Cut wires approximately 1 inch (25mm) from the old solenoid. Remove old solenoid.
2. Assemble wires, as illustrated on the reverse side.
3. Install solenoid and tighten mounting bolts.

