 


## Installation Instructions for Toyota A341E Transmission Solenoids

1. Remove the old solenoids from transmission.
2. Insert new solenoids. Refer to **Figure** at right for proper location of solenoid/bracket assembly.
3. Insert mounting bolt making sure to attach solenoid ground wire.
4. Plug in wiring harness.

**Note:** Be aware that solenoid may rotate during normal operation. Position lead wires away from any moving parts.

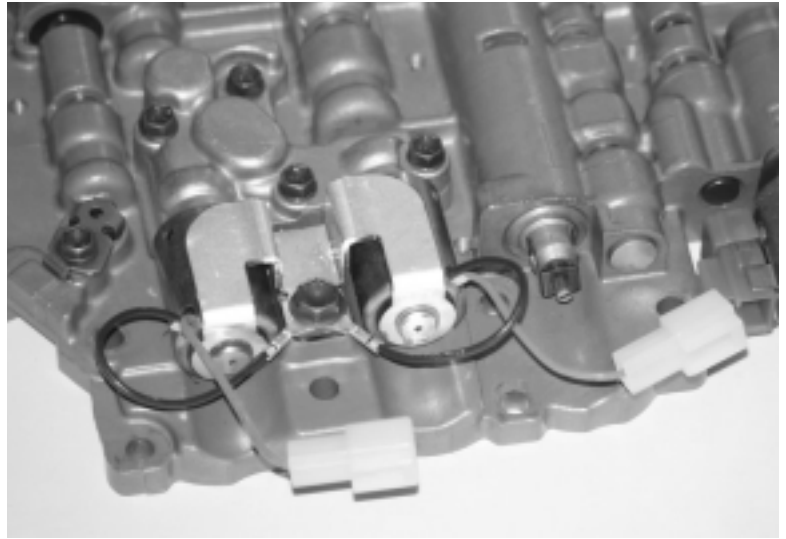

 
Form #4749, Rev. RTP, 11-01-02



## Installation Instructions for Toyota A341E Transmission Solenoids

1. Remove the old solenoids from transmission.
2. Insert new solenoids. Refer to **Figure** at right for proper location of solenoid/bracket assembly.
3. Insert mounting bolt making sure to attach solenoid ground wire.
4. Plug in wiring harness.

**Note:** Be aware that solenoid may rotate during normal operation. Position lead wires away from any moving parts.

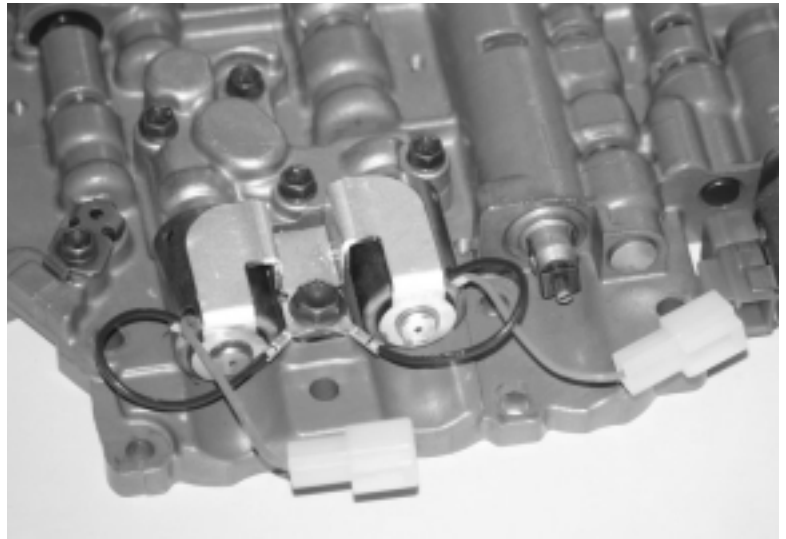


Form #4749, Rev. RTP, 11-01-02



## Installation Instructions for Toyota A341E Transmission Solenoids

 1. Remove the old solenoids from transmission.
2. Insert new solenoids. Refer to **Figure** at right for proper location of solenoid/bracket assembly.
3. Insert mounting bolt making sure to attach solenoid ground wire.
4. Plug in wiring harness.

**Note:** Be aware that solenoid may rotate during normal operation. Position lead wires away from any moving parts.

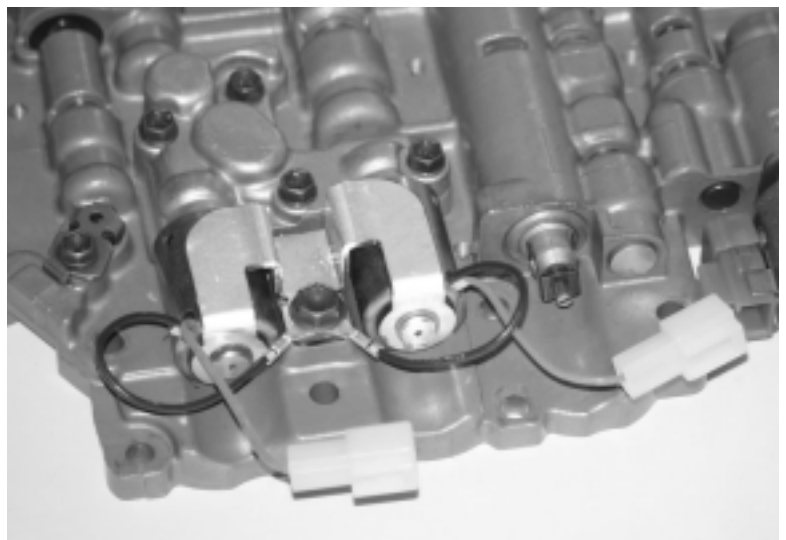

Form #4749, Rev. RTP, 11-01-02

