




# 4T65E Universal Wiring Harness Installation Instructions

Rostra Precision Controls, 2519 Dana Dr., Laurinburg, NC 28352 800-782-3379 www.rostra.com


1. Note position of original wire harness and connectors on valve body, then remove wire harness.
2. Install new harness in same position as the original, plug in mating connectors as shown below.
3. Use zip ties to hold unused pin connectors out of the way as shown. Unused wires will not cause any shorting issues. Re-use original factory clips to hold wire harness in position.

**Note:** 2 pin white connector may be present instead of green connector.


## 97- 02 (14 PIN) APPLICATIONS

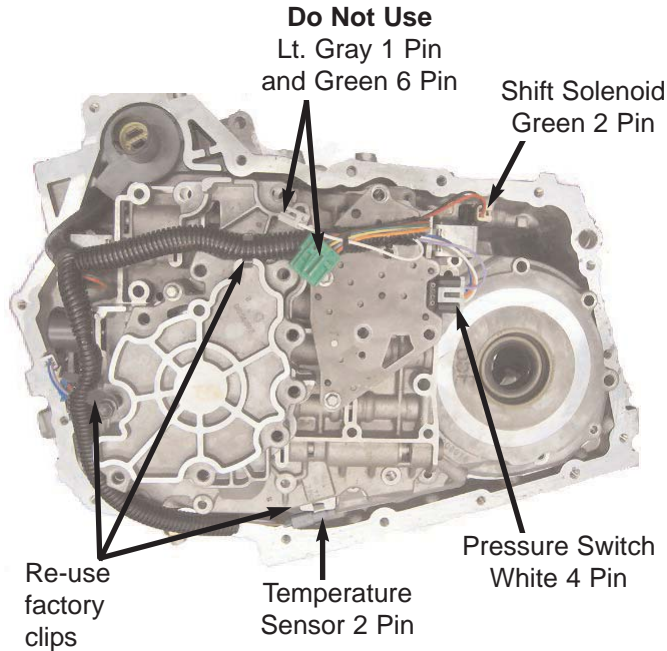

## 99- 02 (19 PIN) APPLICATIONS

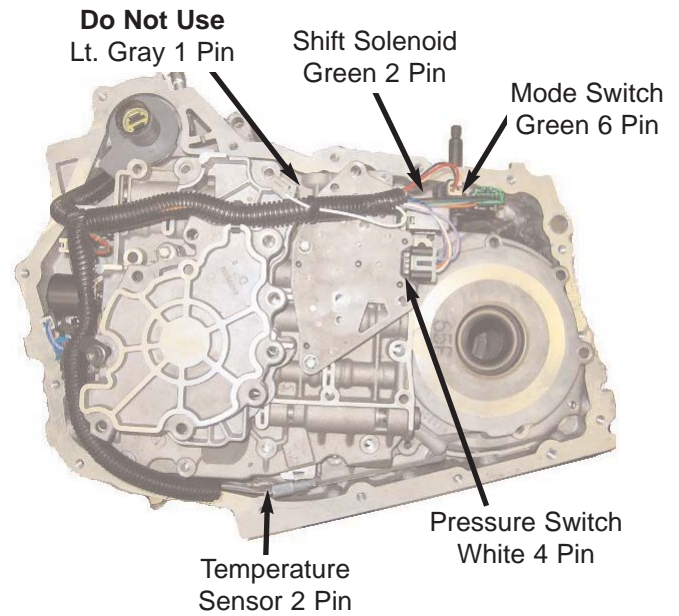

## 03- UP (16 and 17 PIN) APPLICATIONS

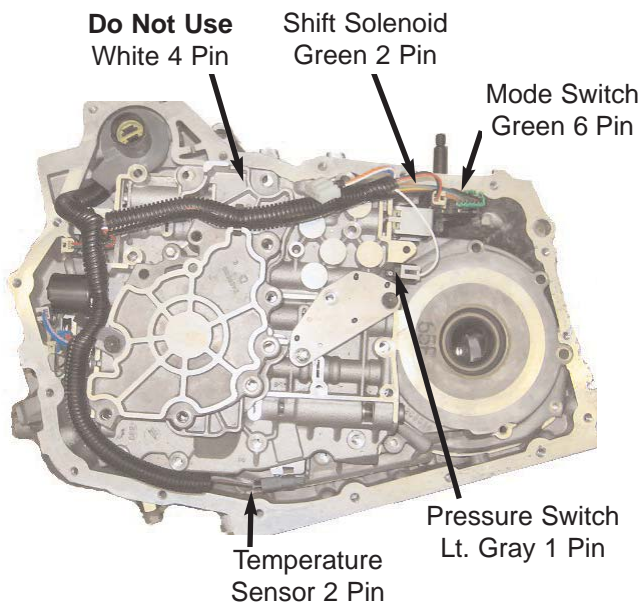

## ALL 4T65E APPLICATIONS

