




Toyota U150/151 Solenoid installation Instructions

Rostra Precision Controls , 2519 Dana, Dr., Laurinburg, NC 28352 800-782-3379 www.rostra.com

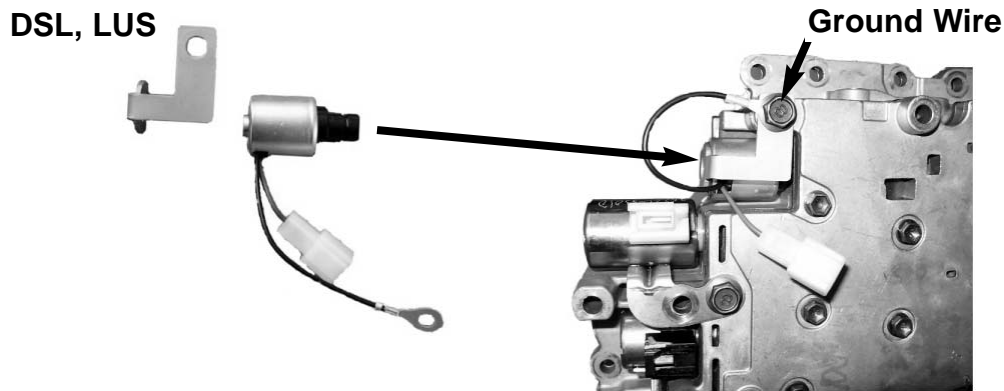


1. Remove old solenoid.
2. Install new solenoid into bore and press flush to valve body.
3. Assemble mounting bracket over solenoid as shown.
4. Insert mounting bolt through ring terminal of the black (ground) wire, and secure in place through the bolt hole in the bracket.
5. Be sure to hold bracket securely against solenoid body to eliminate any end play. tighten the mounting bolt securely.
6. Plug wiring harness into solenoid.

Form #5196, Rev. RTP, 11-10-08



Toyota U150/151 Solenoid installation Instructions

Rostra Precision Controls , 2519 Dana, Dr., Laurinburg, NC 28352 800-782-3379 www.rostra.com

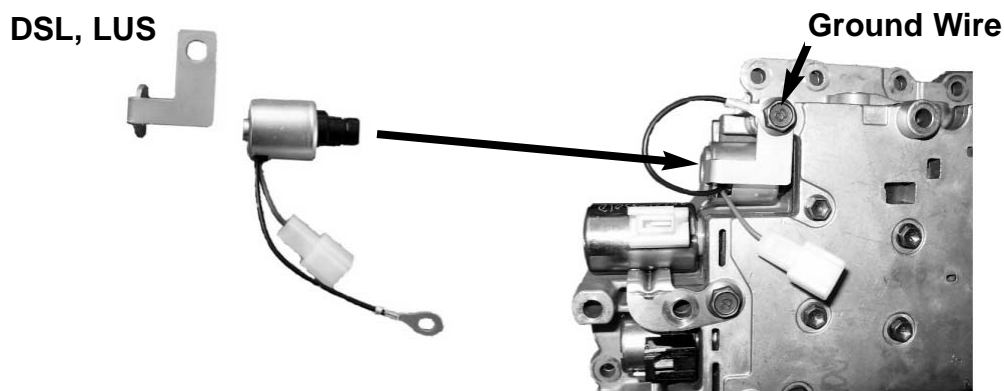

1. Remove old solenoid.
2. Install new solenoid into bore and press flush to valve body.
3. Assemble mounting bracket over solenoid as shown.
4. Insert mounting bolt through ring terminal of the black (ground) wire, and secure in place through the bolt hole in the bracket.
5. Be sure to hold bracket securely against solenoid body to eliminate any end play. tighten the mounting bolt securely.
6. Plug wiring harness into solenoid.

Form #5196, Rev. RTP, 11-10-08